

### Needle bearing assembly:

Have the needle bearing pressed into the collar so that the marked side of the bearing is level with the plan face of the collar. When assembling the bearing unit onto the transmission input shaft, the bearing with the oil hole has to be installed with the "out" – mark facing toward the clutch housing and be sure to slide on the bearing unit that the bearing-type mark faces also toward the clutch housing.

